




Prion Industrial Lighting

Dark Field(Low Angle)

DFL150-30

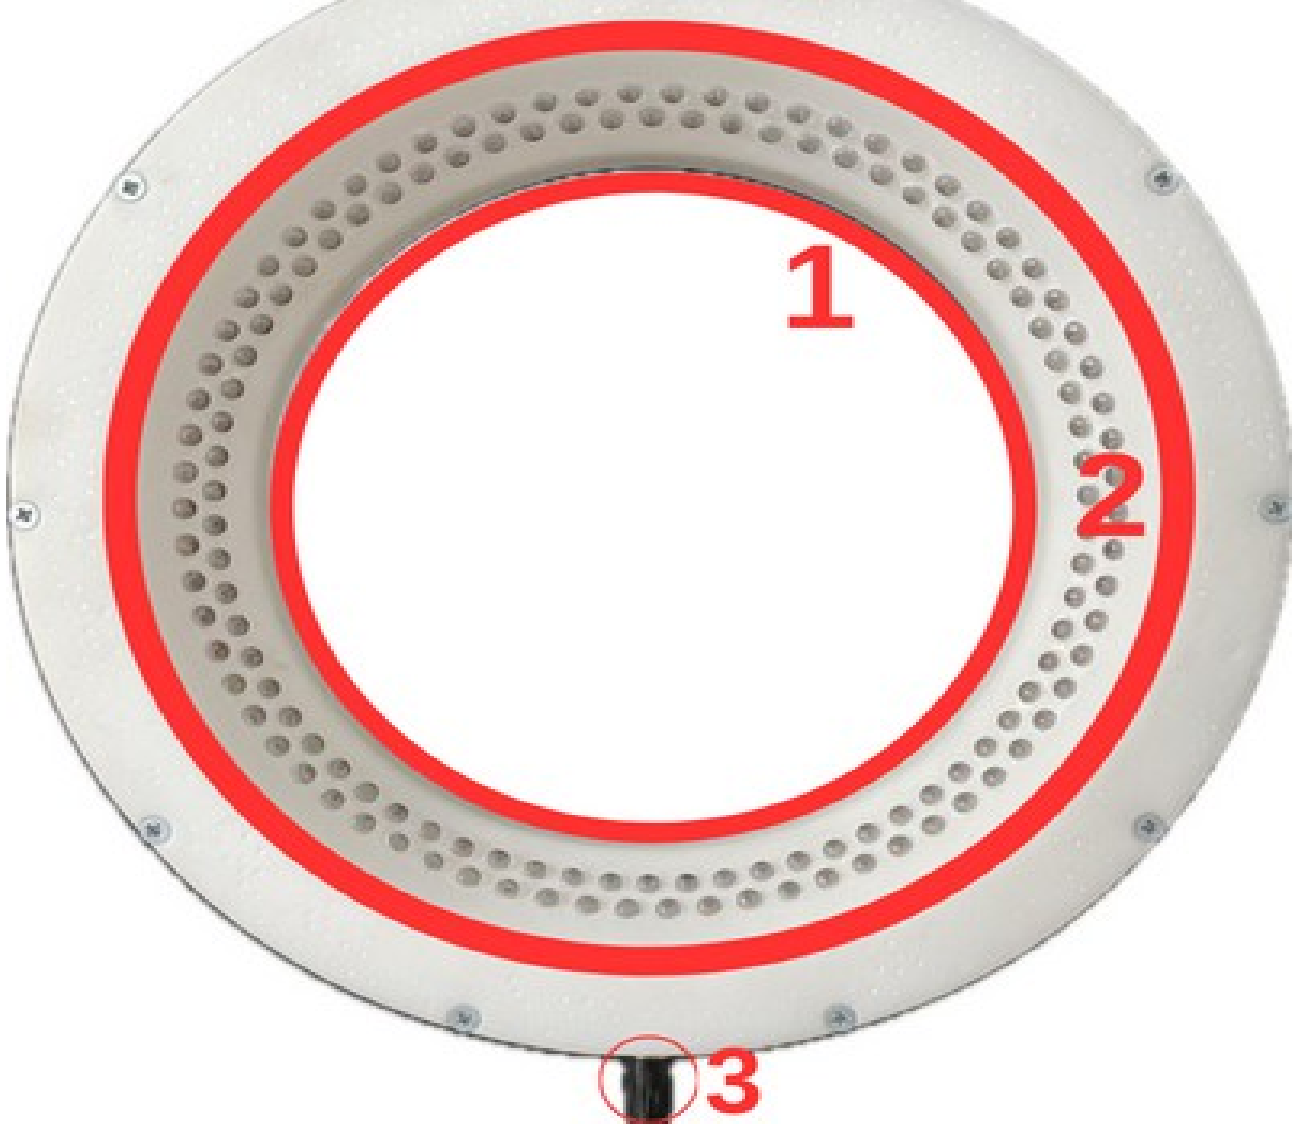

Product Name	Dimensions	Number	Statement
DFL150-30	Rmin:150mm	1	Camera Field of View
	Rmax:220mm	2	Lighting Zone
	Heigh:38mm	3	Product Cable



Pelin Street, Nuhoglu Stage 2
Kadıköy/İstanbul/Turkey

E-Mail: info@ludre.com.tr
Contact: +90 216 519 08 54



Prion Industrial Lighting

Dark Field(Low Angle)

DFL150-30

1.FEATURES

- Illumination Color: 6000K, Green
- Illumination Angle: 30°
- Illumination Intensity: 0,175 lm
- Number of Leds: 70
- Input Voltage: 24 V
- Input Current (15 μ s): 1 Amp
- Input Current (1 second): 0.7 Amp
- Input Current (1 minute): 0.35 Amp
- Input Current (continuous): 0.16 Amp
- Dimensions: Rmin=15 cm, Rmax=22 cm, h=3.8 cm
- Constant Voltage Usage: No
- Diffuser Option: No

3.APPLICATIONS

- Engine Part Inspections
- Packaging Inspections
- Medical Bottle Inspections
- Food Package Inspections
- Surface Inspections
- Microscopic Camera Applications
- Particle Imaging in Liquid
- Particle Size Measurement
- Particle Counting
- Machine Vision
- Cell Identification
- Flame Length Measurement
- Edge Detection
- Material Strain Measurement (elongation / shortening / degradation)
- Motion Detection
- Product Counting
- Color Concentration Information
- Coordinate Information

2.DESCRPTIONS

- Backlight lightings include various options suitable for projects with different angles and color options. It is used in all areas where there is a camera and used in the field of artificial image processing. however, it is preferred in machine lighting and used in special machine lighting.

- Particle Identification
- Cell Imaging
- Machine Monitoring
- Image Processing
- Industrial Led Lighting
- Conveyor Line Lighting
- Robot Vision Applications
- Industry 4.0 Applications
- Machine Lighting
- Bar Light
- Dark Field Light
- Panel Lighting
- Dark Effect Lighting
- Dome Light
- Ring Light
- Panel Light
- Back Light
- Dome Type
- Lighting









Prion Industrial Lighting

Dark Field(Low Angle)

DFL150-30

4.LIGHT CHARACTERISTICS

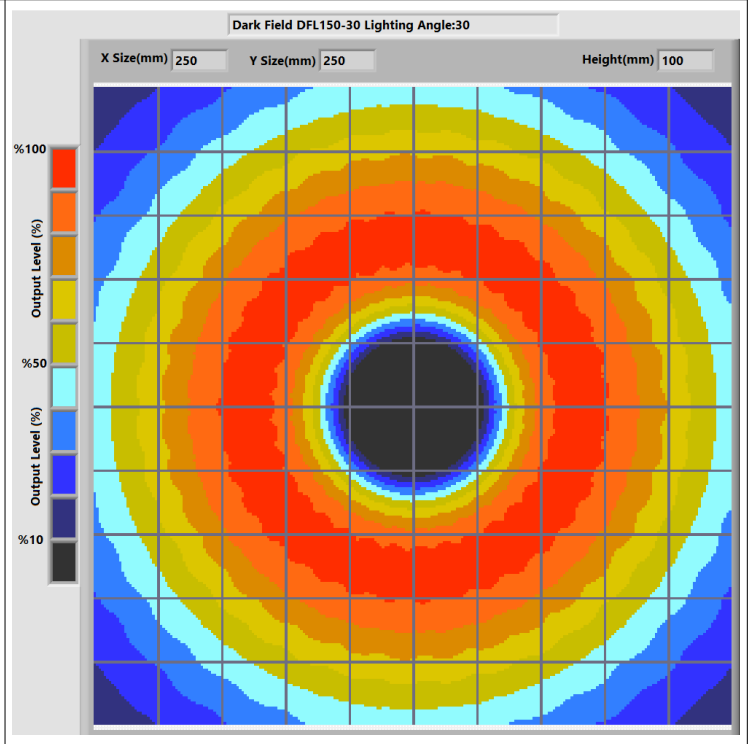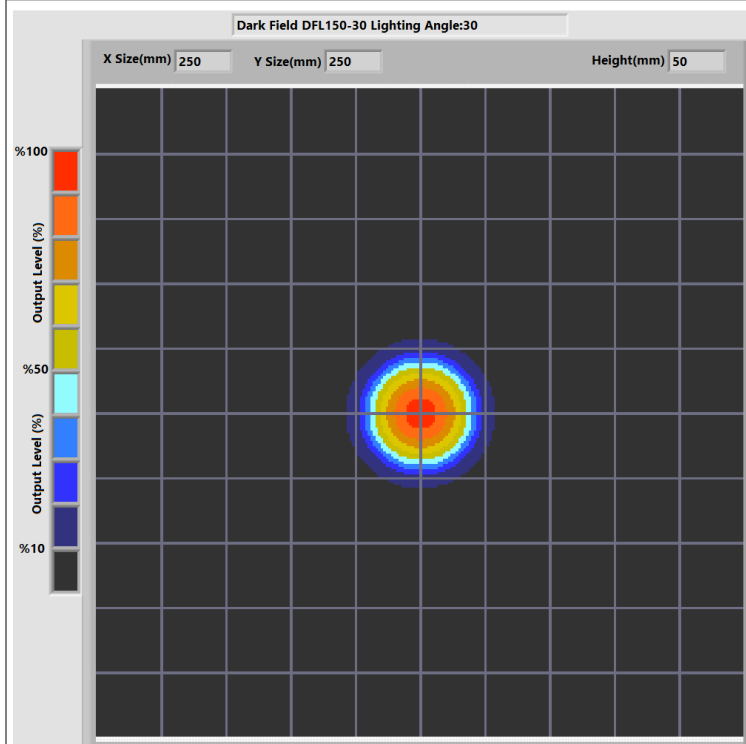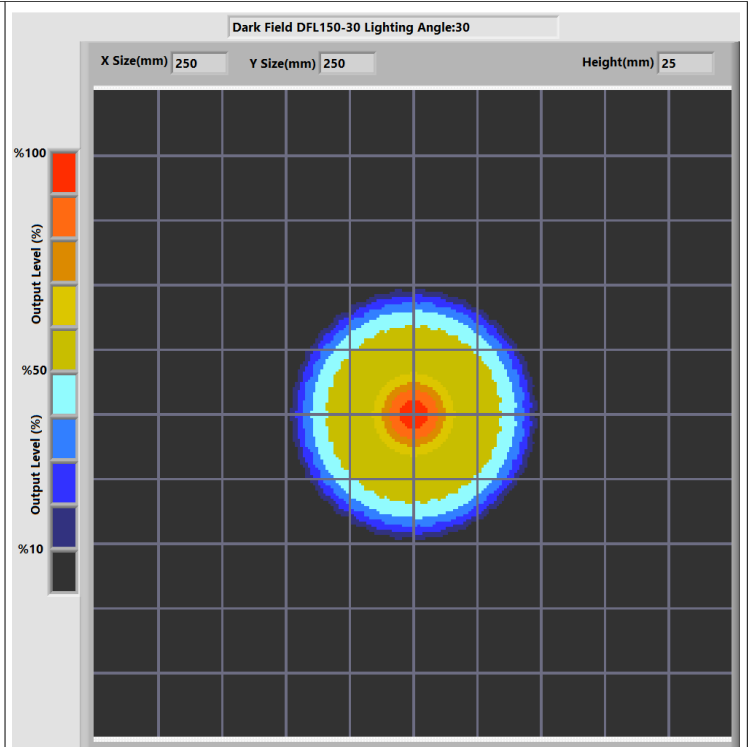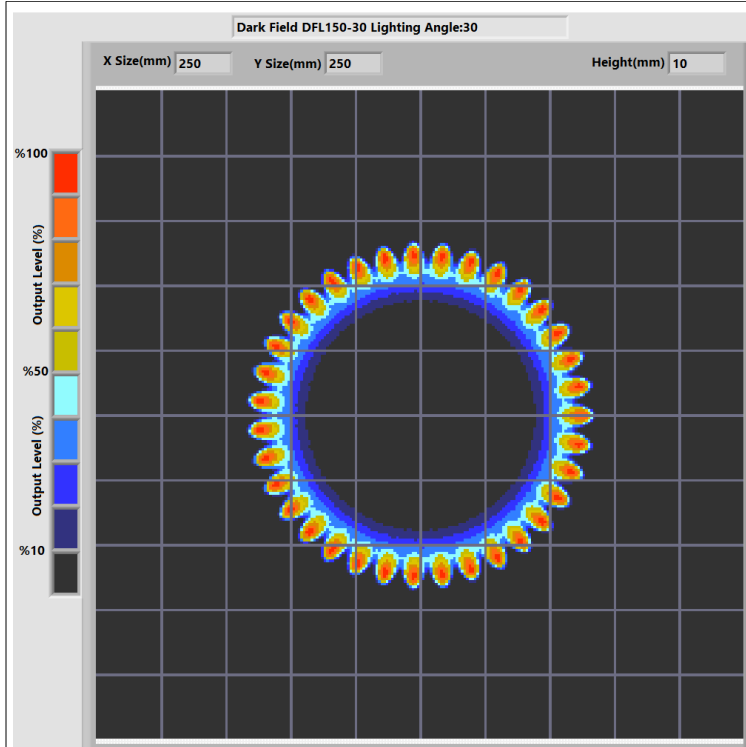

Pelin Street, Nuhoglu Stage 2
Kadıköy/İstanbul/Turkey





E-Mail: info@ludre.com.tr
Contact: +90 216 519 08 54



Prion Industrial Lighting

Dark Field(Low Angle)

DFL150-30

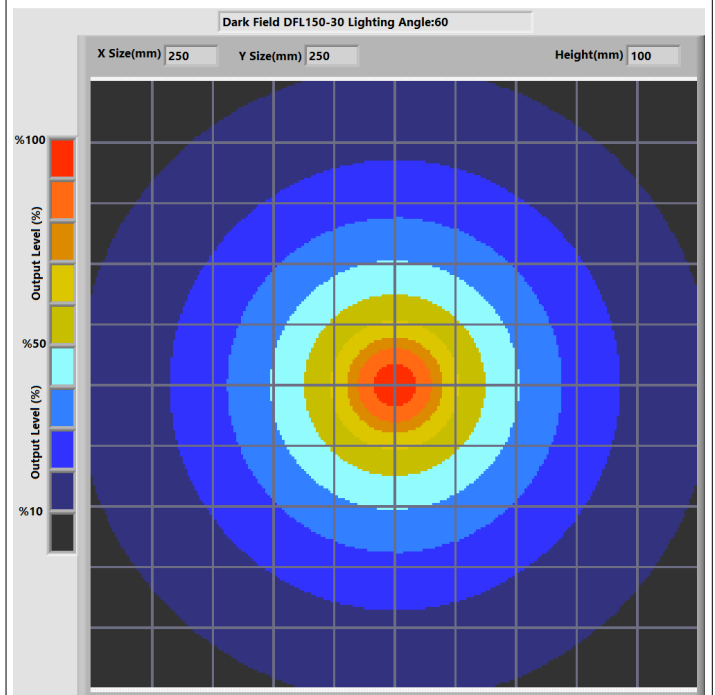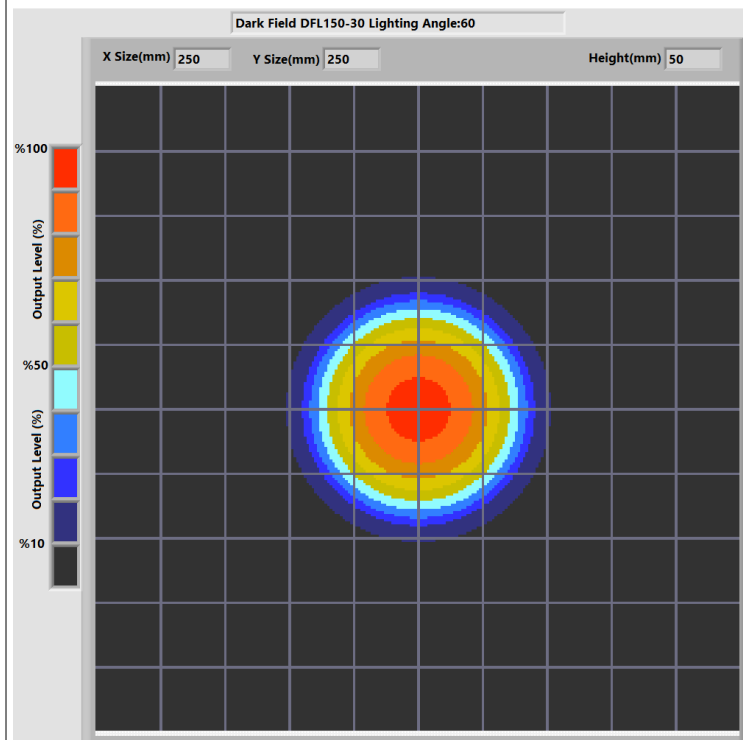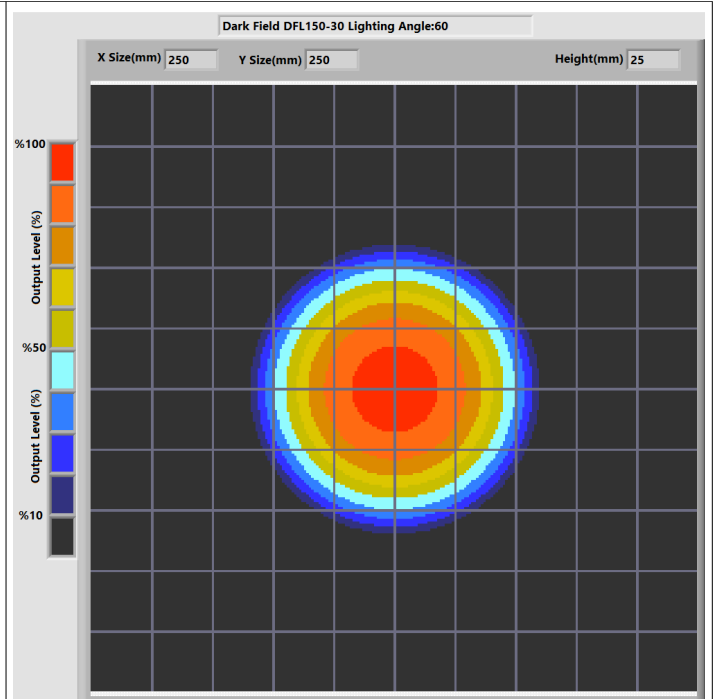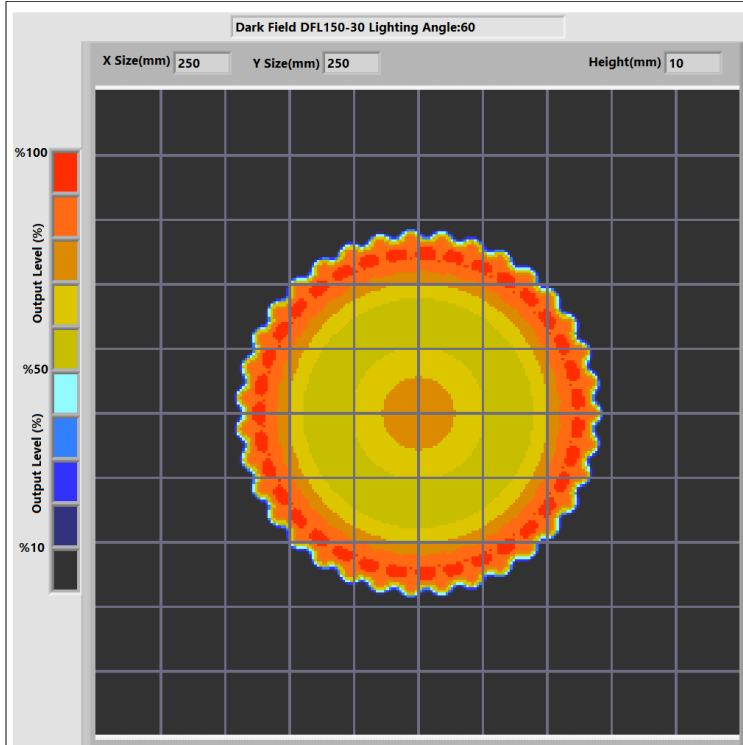

Pelin Street, Nuhoglu Stage 2
Kadıköy/İstanbul/Turkey

E-Mail: info@ludre.com.tr
Contact: +90 216 519 08 54



Prion Industrial Lighting

Dark Field(Low Angle)

DFL150-30

Lens:12mm

Money




Camera h:170mm

Light h:60mm

Lens:12mm

Nut



Camera h:170mm

Light h:60mm

Lens:12mm

Bolt




Camera h:170mm

Light h:60mm

Lens:12mm

Cap

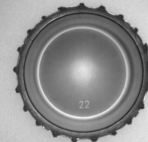

Camera h:170mm

Light h:60mm



Pelin Street, Nuhoglu Stage 2
Kadıköy/İstanbul/Turkey

E-Mail: info@ludre.com.tr
Contact: +90 216 519 08 54



Prion Industrial Lighting

Dark Field(Low Angle)

DFL150-30

Lens:12mm

Can



Camera h:230mm

Light h:70mm

Lens:12mm

Terminal




Camera h:170mm

Light h:60mm

Lens:12mm

Cap

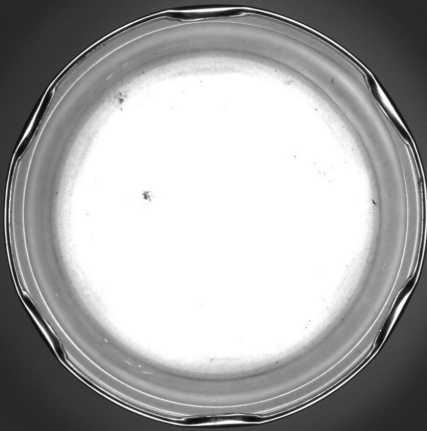

Camera h:230mm

Light h:60mm

Lens:12mm

Toy



Camera h:230mm

Light h:60mm



Pelin Street, Nuhoglu Stage 2
Kadıköy/İstanbul/Turkey

E-Mail: info@ludre.com.tr
Contact: +90 216 519 08 54




Prion Industrial Lighting

Dark Field(Low Angle)

DFL150-30

Lens:12mm

Pcb

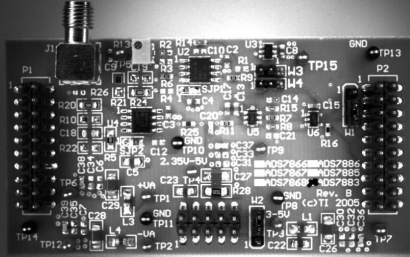

Camera h:230mm

Light h:60mm

Lens:12mm

Box



Camera h:230mm

Light h:80mm

Lens:12mm

Package



Camera h:170mm

Light h:60mm

Lens:12mm

Package



Camera h:230mm

Light h:80mm



Pelin Street, Nuhoglu Stage 2
Kadıköy/İstanbul/Turkey

E-Mail: info@ludre.com.tr
Contact: +90 216 519 08 54

5.PRODUCT USE



Mounting to the machines is possible with the bolt and nut assembly in the areas indicated in the adjacent image.

The points to be taken into consideration during this installation are as follows: The electronic parts should not be contacted while assembling the product.

In addition, if the product is not installed properly, vibrations that may occur will cause errors during measurement and control.



The product is powered by a 2M long cable fixed on it.

We need to make the 24V DC+ connection from our cable line with a red stripe, and we need to make the GND connection from our single color cable line.

When the supplies are connected in reverse, the product will not be damaged, but the product will not work. Cuts, breaks, etc. on the cable. If there is a problem, please contact us before using the product.



Prion Industrial Lighting

Dark Field(Low Angle)

DFL150-30

6.DIMENSIONS



Pelin Street, Nuhoglu Stage 2
Kadıköy/İstanbul/Turkey

E-Mail: info@ludre.com.tr
Contact: +90 216 519 08 54